 
 


OPERATING INSTRUCTIONS

 
Please read the instruction manual before operating the heater. Failure to follow the precautions and instructions may result in death, serious injury and property loss. Only persons who understand and follow the instructions should use the gas heater.

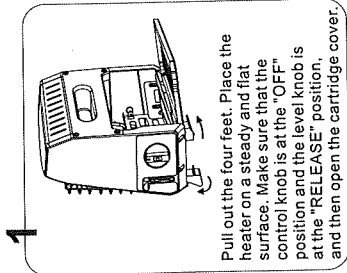


1 Pull out the four feet. Place the heater on a steady and flat surface. Make sure that the control knob is at the "OFF" position and the level knob is at the "RELEASE" position, and then open the cartridge cover.

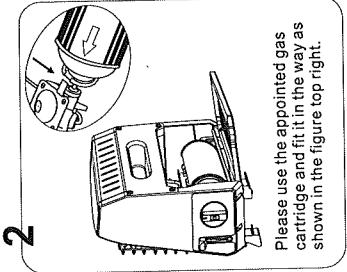


2 Please use the appointed gas cartridge and fit it in the way as shown in the figure top right.

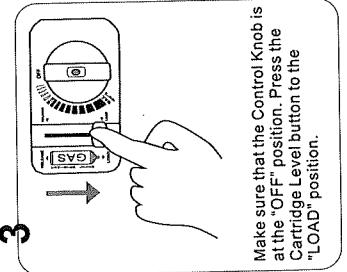

 
3 Make sure that the Control Knob is at the "OFF" position. Press the Cartridge Level button to the "LOAD" position.

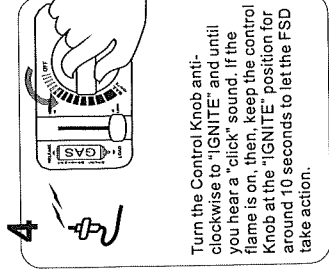

 
4 Turn the Control Knob anti-clockwise to "IGNITE" and until you hear a "click" sound. If the flame is on, then, keep the control knob at the "IGNITE" position for around 10 seconds to let the FSD take action.

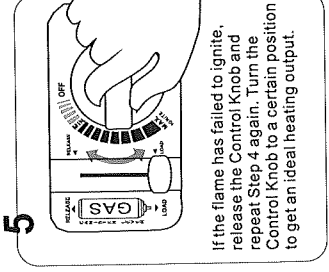

 
5 If the flame has failed to ignite, release the Control Knob and repeat Step 4 again. Turn the Control Knob to a certain position to get an ideal heating output.

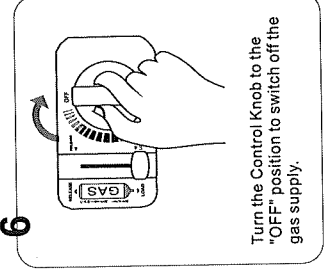

 6 Turn the Control Knob to the "OFF" position to switch off the gas supply.

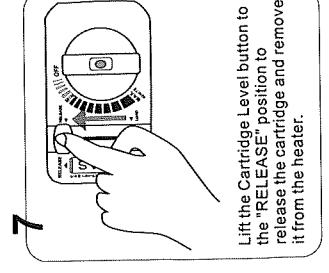

 7 Lift the Cartridge Level button to the "RELEASE" position to release the cartridge and remove it from the heater.

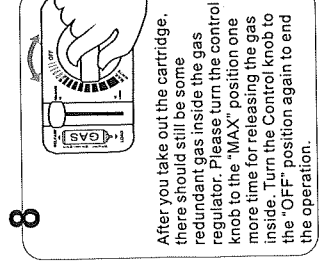


8 After you take out the cartridge, there should still be some redundant gas inside the gas regulator. Please turn the control knob to the "MAX" position one more time for releasing the gas inside. Turn the Control knob to the "OFF" position again to end the operation.


IMPORTANT SAFETY HINTS (whilst operation)



 
1 Don't use the heater to dry clothing or flammable articles. In that case, it may cause accidents, such as fire.

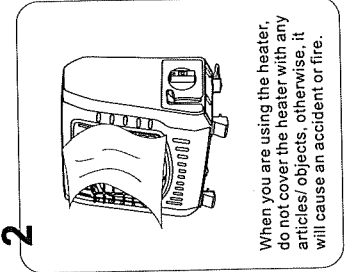

 
2 When you are using the heater, do not cover the heater with any articles/ objects, otherwise, it will cause an accident or fire.

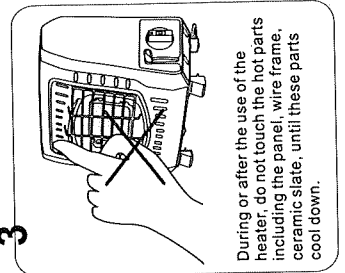

 
3 During or after the use of the heater, do not touch the hot parts including the panel, wire frame, ceramic slate, until these parts cool down.

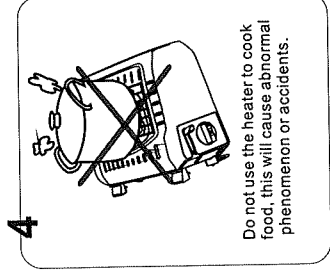

 
4 Do not use the heater to cook food, this will cause abnormal phenomenon or accidents.

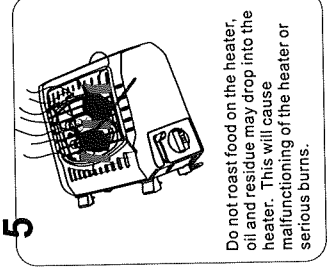

 5 Do not roast food on the heater, oil and residue may drop into the heater. This will cause malfunctioning of the heater or serious burns.

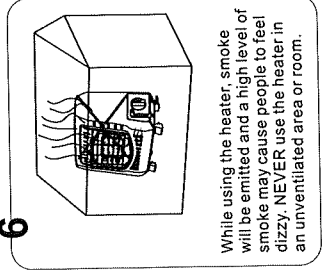

 
6 While using the heater, smoke will be emitted and a high level of smoke may cause people to feel dizzy. NEVER use the heater in an unventilated area or room.

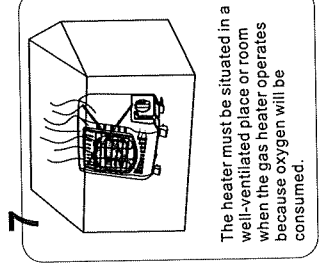

7 The heater must be situated in a well-ventilated place or room when the gas heater operates because oxygen will be consumed.



 8 When the gas in the cartridge is used up, please make a hole in the empty cartridge before you discard it. NEVER discard the empty cartridge into the naked fire, near the fire or place it into extreme heat, it could cause explosion.

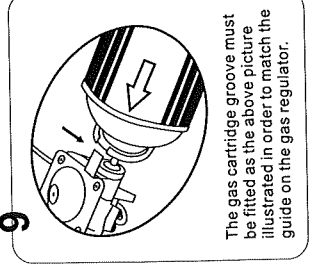

9 The gas cartridge groove must be fitted as the above picture illustrated in order to match the guide on the gas regulator.

Please read these instructions to enhance your knowledge of the portable butane gas heater.

SAFETY PRECAUTIONS

1. Please check each component against the parts list prior to assembly. Please read all safety warnings and assembly instructions before use.
2. Failure to follow the instructions may cause personal injury and /or property damage.
3. Please handle all parts or components with care to avoid injury.
4. Never use in unventilated or enclosed areas to avoid endangering your life. This gas heater consumes air.
5. Always position the heater on a steady, level and heat proof surface. Keep the heater away from wooden fences, overhanging tree branches, and other inflammable materials.
6. During operation, this product can be a source of ignition. Never use the heater in places that contain or may contain volatile or airborne combustibles, or products such as gasoline, solvents, paint thinners, dust particles, or unknown chemicals.
7. Only a 220g butane gas cartridge can be used for the heater.
8. Never leave the heater unattended when it is hot or in use.
9. Keep out of reach of children and pets.
10. Never attempt to move the heater when in use.
11. The accessible parts can be very hot. Always use oven mitts/oven gloves.
12. When you smell a gas leak or hear a "hissing" sound, turn the control knob to the "OFF" position and release the lever.
- Do not use the heater if the problem cannot be solved, and contact your local gas dealer.
13. It is not permitted to modify any part of the heater.
14. Keep the fire extinguisher handy.

WARNING: Never use your Butane Heater indoors!

TECHNICAL DATA

Gas type: Liquefied butane gas
 Gas cartridge: 220g Butane Gas cartridge
 Consumption (max): 90 g/h
 Power approx (max): 1.2KW
 Overall dimensions: W330mm, D130mm, H330
 Weight: Approx (excluding the gas cartridge) 1.8kg

CARE AND MAINTENANCE

Place the gas heater on a safe steady level surface, keep away from inflammable articles/ objects, e.g. wooden fences or overhanging tree branches...etc.

Please ensure that the appliance has completely cooled down before storage.

DAILY CHECK AND MAINTENANCE

- (1) Please take out the gas cartridge before maintenance.
- (2) Please don't disassemble and reassemble the heater by yourself.
- (3) Please maintain the heater after it cools down.

IF THE HEATER IS NOT IN USE FOR A LONG TIME

- (1) Please take the gas cartridge out.
- (2) Please make sure that the heater does not mildew or rust; keep it dry and clean.
- (3) Put the heater into its case after it cools down; keep it in a dry place.
- (4) Keep the heater and gas cartridge separately.

STORAGE OF THE APPLIANCE

1. Disconnect the gas cartridge after use and in transportation.
2. Never leave or store the butane gas cartridge attached with the heater.
3. Never store the butane gas near heat, naked flames, pilot lights, direct sunlight, or any other ignition sources or where the temperature exceeds 50 degree Celsius.
4. Close the gas cartridge cock with the plastic cap that comes with the packaging.

TROUBLE SHOOTING

Troubles	Causes	Cartridge would not install	No gas supply in "MAX" position	Smell gas in "OFF" position	Low flame	Uneven flame	No ignition Faulty ignition	Exinction in operation	Trouble shooting
Ignition knob is not turn to "OFF" position		●							Turn the control knob completely to the "OFF" position and reset the cartridge.
Safety device activated			●				●	●	Refer to explanation for safety device.
Ignition knob malfunction			●	●			●		Contact authorized technician for repairing.
Clogged nozzle			●		●		●		Contact authorized technician for repairing.
Cartridge incorrectly installed		●	●	●			●		Fit cartridge guide into cartridge slot.
Clogged burner holes					●		●		Use a metal brush to clean it.
Bent or rusty electrode							●		Clean electrode.
No gas			●				●	●	Replace fuel cartridge.